



IR Input and Output Feature description




BRIEF OVERVIEW – IR FUNCTION

- › Connectivity
 - Back panel description
 - Connector description
- › Command set
- › Settings
 - Input and Preset Assignment
 - Recommended settings in Web UI
- › Logitech Harmony integration
 - MyHarmony
 - MyHub




CONNECTIVITY

- › IR function accessible via 2 back panel 3.5mm connectors: Input and Output
- › Loop through of incoming commands to output jack

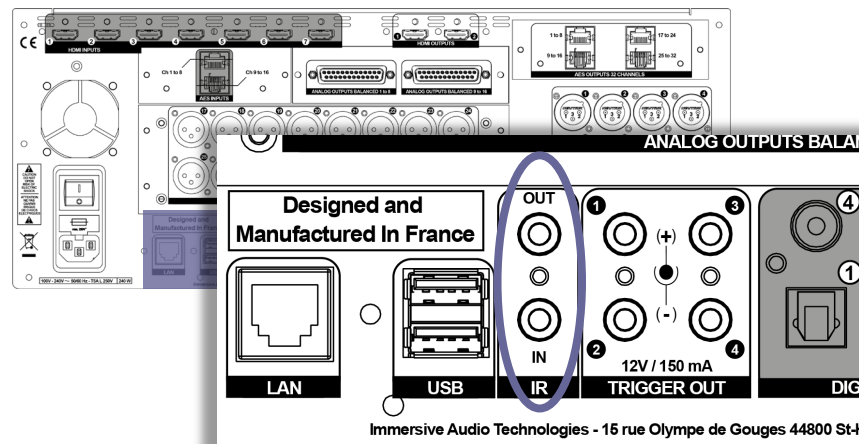

- › Some units have **wrong labelling** in production, follow below information:

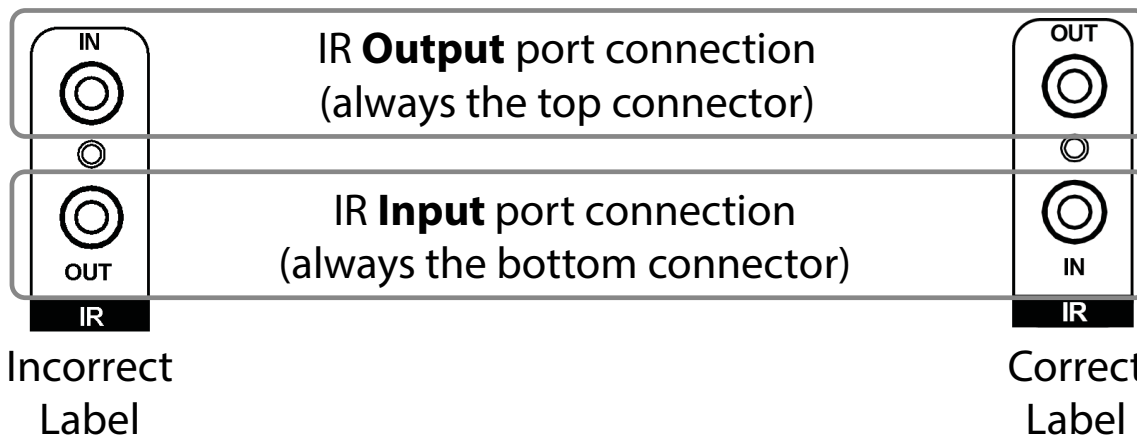





CONNECTOR DESCRIPTION

› Typical IR receiver and transmitter with 3,5mm jack:



› ISP pinout:

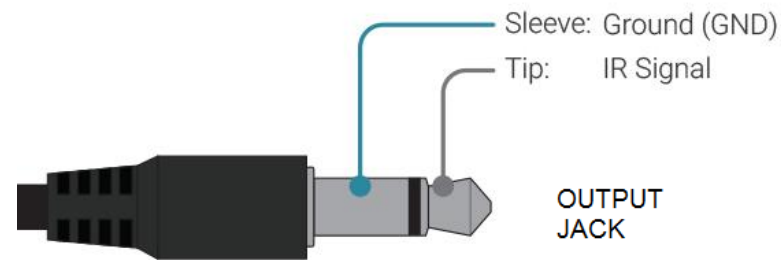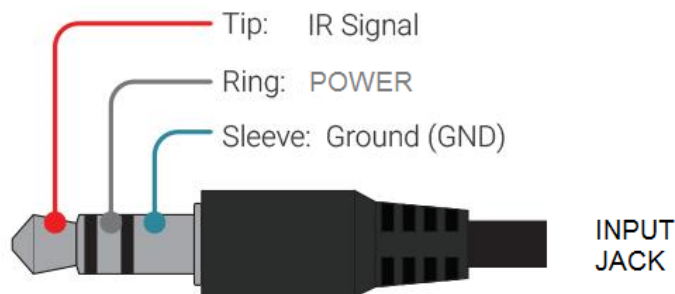

› To cope with the limited amount of IR receiver models available in the market with our « pinout », we suggest swapping Signal and Supply pins using such adaptors

› <http://fr.farnell.com/pro-signal/psg03482/cable-3-5mm-jack-2-rca-plug-6ft/dp/2802127#>





IR COMMANDS SET

› Based on RC5 / RC6 protocol (<https://en.wikipedia.org/wiki/RC-5>)

| | Command Name | System | Command | FUNCTION |
|-----------|---------------------|--------|---------|--------------------------------------|
| Power | POWER ON/OFF | 16 | 12 | Power the unit On / Sleep (Toggle) |
| | POWER ON | 16 | 29 | Power the unit On |
| | POWER OFF | 16 | 30 | Power the unit Off |
| Volume | VOL UP | 16 | 16 | Master volume up |
| Control | VOL DOWN | 16 | 17 | Master volume down |
| | Audio MUTE (Toggle) | 16 | 13 | Mute On & Off (Toggle) |
| Input | INPUT NEXT | 16 | 32 | Switch Input forward |
| Source | INPUT BACK | 16 | 33 | Switch Input backward |
| | Input 1 | 16 | 1 | Select Assigned Input 1 |
| | Input 2 | 16 | 2 | Select Assigned Input 2 |
| | Input 3 | 16 | 3 | Select Assigned Input 3 |
| | Input 4 | 16 | 4 | Select Assigned Input 4 |
| | Input 5 | 16 | 5 | Select Assigned Input 5 |
| | Input 6 | 16 | 6 | Select Assigned Input 6 |
| Preset | Preset + | 16 | 47 | Select Next Assigned Preset |
| | Preset 1 | 16 | 67 | Select Assigned Preset 1 |
| | Preset 2 | 16 | 68 | Select Assigned Preset 2 |
| | Preset 3 | 16 | 69 | Select Assigned Preset 3 |
| | Preset 4 | 16 | 70 | Select Assigned Preset 4 |
| | Preset 5 | 16 | 71 | Select Assigned Preset 5 |
| Preferred | Dolby Surround | 16 | 91 | Select Dolby Surround |
| Upmix | DTS Neural:X | 16 | 92 | Select DTS Neural:X |
| | Auro-Matic | 16 | 93 | Select Auro-Matic |
| | StormAudio Upmix | 16 | 96 | Select StormAudio upmix (future use) |
| | Native | 16 | 94 | Select Native |
| | Stereo Downmix | 16 | 95 | Select Stereo Downmix |



CONFIGURATION

- › Inputs and Presets should be first configured in the ISP / I.ISP WebUI
- › Inputs and Presets can then be assigned in the Settings page to up to **6 Inputs and 5 Presets IR commands**




| IR Remote Control Function Assignment | |
|---------------------------------------|-------------|
| ▶ Inputs | |
| Input 1 | HDMI 1 ▾ |
| Input 2 | HDMI 2 ▾ |
| Input 3 | Optical 1 ▾ |
| Input 4 | Coaxial 4 ▾ |
| Input 5 | Stereo 1 ▾ |
| Input 6 | None ▾ |

| IR Remote Control Function Assignment | |
|---------------------------------------|---------------|
| ▶ Presets | |
| Preset 1 | SphereAudio ▾ |
| Preset 2 | Theater 1 ▾ |
| Preset 3 | SubTheater1 ▾ |
| Preset 4 | SubTheater2 ▾ |
| Preset 5 | None ▾ |



CONFIGURATION

- › Additionally, it is recommended in the Settings page:
 - › To Enable the Fast Boot Mode to avoid loss of commands at power up from Sleep mode
 - › To Enable Zoom On Changes so any changes linked to a remote control command is shown with bigger font in the front panel display

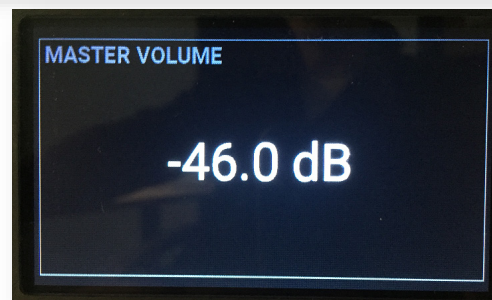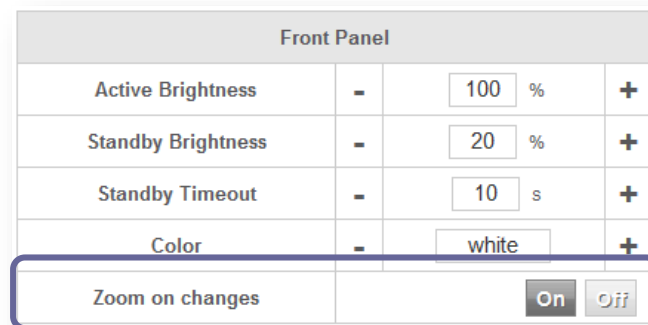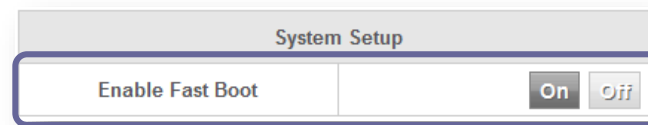



LOGITECH HARMONY

- › Integration within **Logitech Harmony** database
- › Brand: **StormAudio**
- › Device: **ISP Elite**
- › Possibility to create activities and use the ISP as the audio playback device.
See [MyHarmony website](#)

- › Compatible with **Logitech Harmony Hub** interface using IR Receiver on ISP/I.ISP
- › See some [Harmony Hub setup tutorials](#)



